



**INSTALLATION AND MAINTENANCE MANUAL
FOR MEDIUM VOLTAGE ELECTRIC FIRE PUMP
CONTROLLER
MODEL MPA**

1. GENERAL DESCRIPTION

Model MPA medium voltage electric fire pump controllers are designed to automatically start an electric driven fire pump upon detection of a pressure drop in the fire protection system. It is intended to control induction motors and is arranged for electrical or manual starting and stopping

and for automatic start, controlled by the pressure sensor. The combination automatic/non-automatic option provides a 10-minute automatic stop after automatic start but only after all starting causes have returned to normal

2. TYPES OF ELECTRIC FIRE PUMP CONTROLLERS

FIRE PUMP CATALOGUE NUMBER				
MODEL n° EXAMPLE: MPA - 4400 / 500 / 3 / 50				
MPA	4400	500	3	50
Model prefix	Voltage	HP rating	Phase	Frequency

3. METHODS OF STARTING / STOPPING

The controllers are available as combination automatic / non-automatic with provision for manual or automatic shutdown (automatic shutdown only possible after automatic start)

3.1. METHODS OF STARTING

3.1.1. AUTOMATIC START

The controller will start automatically on low pressure detection by the pressure sensor when pressure drops below cut-in threshold.

3.1.2. MANUAL START

The motor can be started by depressing the START push button whatever the system pressure.

3.1.3. REMOTE START

The motor can be started from a remote location by momentarily opening a contact independent of the pressure control.

3.1.4. EMERGENCY START

The motor can be started manually by using the emergency handle. This handle can be maintained in a closed position.

3.1.5. SEQUENTIAL START

In case of multiple pump application, it may be necessary to delay the starting of each motor in case of water pressure drop to prevent simultaneous starting of all motors.

3.1.6. EXTERNAL SIGNAL START

A connection for a deluge valve is provided; the controller can be started by opening a normally closed contact on the fire protection equipment (deluge valve) independent of the pressure sensor. When option A4 is supplied (flowmeter), the motor can be started by closing a normally open contact from the flowmeter

independent of the pressure sensor.

IMPORTANT: if the pressure does not drop below the cut-in pressure, the pump will stop when the contact will re-open.

3.1.7. WEEKLY START

The motor can be started (and stopped) automatically at the preprogrammed time.

3.1.8. TEST START

The motor can be started automatically for a running period of 10 minutes by pressing cut-in and cut-out push button simultaneously.

3.2. METHODS OF STOPPING.

3.2.1. MANUAL STOP

Manual stop is done by depressing the STOP push button.

The manual stop is possible after a manual start, remote start, or external signal start but starting condition must have disappeared.

The manual stop is also possible after an automatic start but only if pressure is above the cut-out threshold.

3.2.2. AUTOMATIC STOP

The automatic stop is possible only after an automatic start, and this function must be activated. When this function is enabled, the motor is automatically stopped 10 minutes after the restoration of the pressure (above the cut-out threshold).

4. FRONT PANEL

4.1. GENERALS

Two displays are located on the front membrane of the pump controller.

The upper electronic board/display is monitoring connected source parameters (voltage, frequency & current monitoring); the lower electronic board/display is monitoring pressure data's and is recording pressure data's and events.

4.2. PUMP CONTROLLER - POWER MONITORING BOARD

4.2.1. DISPLAY

This display is a 4 line – 16 character screen.

DISPLAY IN 'NORMAL' MODE.

When powered, the electrical display is activated in the "normal" mode.

4408	4403	4423
19	21	19
12.3h	c =	46
□ □ □ □	□ □ □	■

The first line shows the three voltages between phases.

The second line shows the current in each phase.

The third line shows pump run elapse time meter, and pump start count. This third line shows alarm messages when present.

The fourth line is reserved for following indicators:

Overcurrent

When the electronic board detects overcurrent (130% of FLA) for more than 20 seconds, the indicator starts flashing. If overcurrent occurred, the indicator remains steady until the RESET push button is depressed.

Undercurrent

When the electronic board detects a current that is lower than 30% of FLA for more than 20 seconds, the indicator starts flashing. If undercurrent occurred, the indicator remains steady until the RESET push button is depressed.

Overvoltage

When the electronic board detects an overvoltage condition (110% of nominal voltage) for more than 1 second, the indicator starts flashing. If overvoltage occurred, the indicator remains steady until the RESET push button is depressed.

Undervoltage

When the electronic board detects an undervoltage condition (85% of nominal voltage) for more than 1 second, the indicator starts flashing. If undervoltage occurred, the indicator remains steady until the RESET push button is depressed.

Note: a power shut down is not considered as an undervoltage condition.

Phase unbalance

When the electronic board detects a phase unbalance condition¹ (over 3%) for more than 1 second, the indicator starts flashing. If phase unbalance occurred, the indicator remains steady until the RESET push button is depressed.

Phase loss

When the electronic board detects a phase loss condition, for more than 1 second, the indicator is steady ON. This indicator is automatically reset when power is restored.

Fail to start

Under any start conditions (provided main contactor energized), if the current remains below 5% for more than 20 seconds, the indicator starts flashing. If fail to start condition occurred, the indicator remains steady until the RESET push button is depressed.

Motor Run:

When the main contactor closes, the RUN indicator appears. This indicator is automatically reset when main contactor re-open.

¹ Unbalance is defined as the ratio of maximum deviation from average versus average.

Example: With voltages of 460, 467, and 450, the average is 459, the maximum deviation from the average is 9, and the Percent Unbalance = $100 \times 9 / 459 = 1.96 \%$

Reference: NEMA Standards MG 1 – 14.35.

DISPLAY IN 'STATUS' MODE

Sometimes it is convenient for maintenance personnel to show all input and output status.

	12345678
Input :	00001000
Output :	10000000
OV:	4550 Gnd: 5.1A

By pressing the RESET push button longer than 5 seconds, the display will switch in the 'status' mode.

The three top lines indicate status of the eight inputs and outputs.

The fourth line shows maximum voltage (OV) that has been applied to the controller and the ground fault threshold (GND).

The maximum voltage (OV) value cannot be reset. The ground fault detection is optional.

The display will switch back to the normal display mode after 10 minutes, or when the reset push button is depressed.

	Input	Output
1	Alarm 1	Power Available
2	Alarm 2	Phase Reversal
3	Alarm 3	Pump Room Relay
4	Alarm 4	Motor Alarm Relay
5	Motor run	Lock Rotor (shunt trip)
6	Alarm 5	Alarm A
7	DIP ABC-CBA	Alarm B
8	Reset PB	Alarm C

DISPLAY IN 'SIMULATION' MODE

By pressing the RESET push button longer than 10 seconds, the display will switch in the phase reversal simulation mode. A message will appear on the screen to inform that the controller is in phase reversal simulation. During this simulation, the phase reversal alarm relay and phase reversal pilot light will be energized.

Phase Reversal Simulation
8 Seconds

4.2.2. 'RESET' PUSH BUTTON

This button is used to reset indicator, when indicator is steady. When depressed continuously for more than 5 seconds, the screen shows input/output status. When depressed continuously for more than 10 seconds, a 10 second phase reversal simulation is performed.

4.2.3. POWER AVAILABLE LIGHT

This LED indicates power acceptable on all 3 phases and phase sequence is correct. The power is acceptable if the voltage is greater than 85% of nominal voltage.

4.2.4. PHASE REVERSAL LIGHT

This LED indicates phase reversal of the power source.

4.3. PUMP CONTROLLER - PRESSURE MONITORING BOARD

4.3.1. DISPLAY

This display is a 2 line – 16 character screen.

The top line shows day and time, or various status messages.

The day and time are always shown. If a message must be shown, the screen is scrolling successively at an interval of ± 1 second.

The last digit indicates if the weekly test is enabled (E) or disabled (D).

If a timer count-down (on timer & off timer) is activated, the remaining time is shown on the right (replacing weekly test status digit). If manual stop is required to stop the pump (automatic stop function not enabled), the word «MANU» appears on the right.

The second line is dedicated for the pressure system status.

The first group of digits shows the cut-out threshold, the second group of digits shows the cut-in threshold, the third group shows the actual system pressure.

The pressure can be displayed in PSI or bar. The unit is shown on the display – P for PSI, B for bar.

Note:

1psi = 6.894 kPa = 0.068 bar

1kPa = 0.010 bar = 0.145 psi

1bar = 100 kPa = 14.503 psi

4.3.2.PUMP DEMAND LIGHT

'Pump demand' light indicates an automatic start condition. It is activated when the pressure drops below the cut-in pressure. It is deactivated either when the run period timer expired (if the function is enabled), or either when the stop push button is depressed. The stop push button is enabled only if the actual system pressure is above cut-out threshold.

The message 'Pump on demand' appears on the first line when stop push button is disabled.

4.3.3.WEEKLY TEST LIGHT

Weekly test light indicates that the system is in operation due to a weekly test. The weekly test is programmable. Note: the weekly light is also energized during manual test.

4.3.4.CUT-OUT AND CUT-IN PUSHBUTTONS.

Those push buttons are used to adjust the cut-in and cut-out threshold. A quick action on the push button will increase value by one (1). A longer action will increase value by ten (10). The value only increases from minimum to maximum, and when maximum is reached, the value return to the minimum value. **The cut-in and cut-out can be adjusted only when 'Lock-Unlock » dipswitch is in 'Unlock' position.**

The cut-in and cut-out push buttons are also use to move cursor and change values in programming mode.

If the cut-in and cut-out push buttons are depressed simultaneously, the system simulates a pressure drop in the system to start the pump for a run period time of 10 minutes.

With board version 040122SWP01-11 and above, it is possible to avoid nuisance starting when adjusting pressure threshold by depressing STOP push button while Lock-Unlock dipswitch is in 'Unlock' position.

4.3.5.PRINT PUSHBUTTON.

The 'print' is used to print the last seven day résumé and the pressure data's. The 'print' is used only if a printer is mounted.

4.3.6.USB COMMUNICATION

PORT.

The USB communication port is used to connect a laptop with USB cable. From the laptop using HyperTerminal provided with Windows, the user has access to pressure data's, historic of the events, actual settings.

5. ALARM CONTACTS

The following alarm contacts are available on all controllers:

- motor run
- power available (loss of phase)
- phase reversal
- pump room alarm
- motor trouble
- EPSR ready

The following alarm contacts are available in option:

- weekly test (option C4)
- low suction (option C5)
- low discharge (option C6)
- low temperature (option C7)
- low level (option C10)
- high motor temperature(option C11)
- high vibration (option C12)
- ground fault (option C13)
- pump on demand/automatic start (option C14)
- pump fail to start (option C15)
- control voltage healthy (option C16)
- flow meter open (option C17)
- high water level (option C18)

6. INSTALLATION

The MPA medium voltage electric fire pump controller is FM approved and is intended to be installed in accordance with the Standard

of the National Fire Protection Association for the Installation of Centrifugal Fire Pumps, NFPA n°20-2007 (Centrifugal Fire Pumps).

7. LOCATION

Controller shall be located as close as practical to the motor it controls and shall be within sight of the motor.

Controller shall be so located or so protected that it will not be damaged by water escaping from pump or pump connections.

Working clearances around controller shall comply with local codes.

Controller shall be suitable for use in locations subject to a moderate degree of moisture, such as a damp basement. The pump room ambient temperature shall be between 41 °F (5 °C) and 122 °F (50 °C).

The standard controller enclosure is rated NEMA 2. It is the installer's responsibility to assure that either the standard enclosure meets the ambient conditions or that an enclosure with an appropriate rating has been provided.

Controllers shall be located in a building; they are not designed for outside location. The paint color may change if controller is exposed to Ultraviolet rays during long period of time.

8. MOUNTING

8.1. WALL MOUNTING

The fire pump controller shall be mounted in a substantial manner on a single noncombustible supporting structure.

Wall mounted controller shall be attached to the structure or wall using all mounting ears provided on the controller with hardware designed to support the weight of the controller at a height not less than 12 in. above floor level.

8.2. FLOOR MOUNTING

Floor mounted controller shall be attached to the floor using all holes provided on the mounting brackets with hardware designed to support the weight of the controller. A concrete slab is recommended to avoid water accumulation on the controller's feet.

9. CONNECTIONS

9.1. WATER CONNECTIONS

The threaded connection of the pressure sensor is 1/4" NPT female. The pressure sensor connection is located on the side of the controller.

The pump start - stop pressure sensor (PT1) shall be connected to the system as per NFPA 20-2007, Chapter 10-5.2.1.6 (b) and (c) and figure A-10-5.2.1 (a) and (b).

The optional pressure switch shall be connected to the suction side of the system following standard practice.

9.2. ELECTRICAL CONNECTIONS

9.2.1. ELECTRICAL WIRING

The electrical wiring between the power source and the fire pump controller shall meet local codes. Electrical wiring shall be typically sized to carry at least 125% of the full load current of the fire pump motor.

Incoming power terminals on the controller are suitable to accept wire based on that selection with insulation not less than 60°C. (Refer to terminal diagram for terminal sizes.)

The electrical wiring between the fire pump controller and the pump motor shall be in rigid, intermediate, or liquid tight flexible metal conduit or Type MI cable and meet the requirements of local codes.

The number of conductors required is 3-wires plus ground sized at 125% of full load current.

9.2.2. ENCLOSURE DRILLING

The dimension drawings show the area suitable for incoming power and motor connections. No other location shall be used. Only watertight hub fittings shall be used when entering the cabinet to preserve the NEMA rating of the cabinet.

The installer is responsible for adequate protection of fire pump controller components against metallic debris or drilling chips. Failure to do so may cause injuries to personnel, damage the controller and subsequently void warranty.

9.2.3. INCOMING POWER CONNECTIONS

Incoming normal power is to be connected to terminals identified L1-L2 and L3 located on the disconnecting means IS.

The electronic board is phase sensitive, thus the incoming power leads must be connected in the correct phase order.

9.2.4. MOTOR CONNECTIONS

Motor connections are connected to terminals identified by T1-T2 and T3 located on main contactor (1M).

It is the responsibility of the installer to obtain connection information on the motor

and to assure that the motor is connected as per motor manufacturer recommendations.

Failure to do so may cause injuries to personnel, damage the motor and/or the controller and subsequently void warranty on both items.

9.2.5. ALARM CONTACT CONNECTION

Since these alarm connections are derived from control relays or motor contactor auxiliary contacts located inside a metallic enclosure with wiring that can pick up induction from the line voltage, an induced voltage can be present at the terminal connections. It is the responsibility of the alarm contractor to evaluate the potential danger for their equipment.

Except when mentioned, all contacts are located on the relay board and clearly identify by C (common), NO (Normally Open) or NC (normally closed).

Contacts are rated for 8A, 250VAC.

The following contacts are available from the top to the bottom of the board.

MOTOR RUN

Identify by 'RUN NC' or 'RUN NO'.

The NC contact will open to signal motor running. The NO contact will close to signal motor running.

LOSS OF PHASE

Identify by 'Pow. Av.'.

The NO contacts (held in closed position when power is available) will open and the NC contacts (held in open position when power is available) will close to signal loss of any phase or power.

PHASE REVERSAL

Identify by 'Ph. Rev.'.

The NO contacts will close and the NC contacts will open to signal phase reversal.

PUMP ROOM ALARM

Identify by 'Room Al.'.

The NO contacts will close and the NC contacts will open to signal a pump room alarm (Overvoltage or Undervoltage or phase unbalance). This relay may be activated by external command, contact factory.

MOTOR TROUBLE

Identify by 'Motor Tr.'.

The NO contacts will close and the NC contacts will open to signal a motor trouble (overcurrent or undercurrent or fail to start or ground fault (optional)). This relay may be activated by external command, contact factory.

WEEKLY TEST (OPTION C4)

Identify by 'Weekly T.'.

The NO contacts will close and the NC contacts will open to signal the motor is running because of exercise weekly test.

EPSR READY

Identify by 'EPSR Ready'.

The NO contacts (held in closed position when power is available) will open and the NC contacts (held in open position when power is available) will close to signal the EPSR (pressure board) is ready and functioning.

INTERLOCK (OPTION A7)

Relay CR34: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open to signal interlock to remote equipment.

EXTRA MOTOR RUN ALARM CONTACTS (OPTION C1)

The NO contact is connected to terminals 93-94 and will close to signal motor run.

The NC contact is connected to terminals 95-96 and will open to signal motor run.

LOW SUCTION (OPTION C5)

Relay CR18: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of low suction condition.

LOW DISCHARGE (OPTION C6)

Relay CR19: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of low discharge pressure condition.

LOW TEMPERATURE (OPTION C7)

Relay CR20: this relay is added on a terminal strip. The NO contacts (11-12 and

21-22) will close; the NC contacts (11-14 and 21-24) will open in case of low temperature condition

LOW LEVEL (OPTION C10)

Relay CR21: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of low level condition

HIGH MOTOR TEMPERATURE (OPTION C11)

Relay CR22: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of high motor temperature condition

HIGH VIBRATION (OPTION C12)

Relay CR23: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of high vibration condition

GROUND FAULT (OPTION C13)

Relay CR24: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of ground fault detection.

PUMP ON DEMAND (OPTION C14)

Relay CR25: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of pump on demand condition.

FAIL TO START (OPTION C15)

Relay CR26: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of fail to start condition - no current under an automatic start.

CONTROL VOLTAGE HEALTHY (OPTION C16)

Relay CR27: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14

and 21-24) will open when control voltage is healthy.

FLOW METER OPEN (OPTION C17)

Relay CR39: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of flow meter open condition.

HIGH WATER LEVEL (OPTION C18)

Relay CR40: this relay is added on a terminal strip. The NO contacts (11-12 and 21-22) will close; the NC contacts (11-14 and 21-24) will open in case of high water level condition.

LOCK OUT SIGNAL (OPTION A6)

Three terminals (107-108-109) are installed on a terminal strip. The contact 107-108 will close and the contact 108-109 will open to signal that the fire pump controller is locked out (will not start in automatic mode).

9.2.6.CONNECTION TO EXTERNAL DEVICE

REMOTE START SIGNAL

Each electric fire pump controller has provision for connection to a manual remote start station (remote start contact). This remote start contact shall be normally closed and connected to terminals identify by 'Remote St NC' on the relay board. Contact opening will start the pump motor.

DELUGE VALVE

Two terminals identify 'Deluge NC' are installed on the relay board for the connection of normally closed contact from a deluge valve or other fire protection equipment control. Opening this contact will initiate a pump start. **IMPORTANT: the jumper IJ1 located close from the terminal must be cut to enable the function.**

FLOW SWITCH (OPTION A4)

Two terminals identify 'flow switch' are installed on the relay board for the connection of a NO contact from external flow switch. Closure of this contact will initiate pump motor start.

IMPORTANT: if pressure does not drop

below cut-in threshold, the pump will stop at the contact re-opening.

LOCK OUT SIGNAL (OPTION A6)

To respect the NFPA 20-2007 art 10.5.2.6, two sets of terminals are added on the terminal strip (104-106 and 3-110).

If the interlocked equipments are in the same pump room and wiring is mechanically protected, the terminals 3-110 can be used to connect a NO contact. When this NO contact is open, the fire pump controller is enabled. If this NO contact is closed, the controller is locked out and will not start with a pressure drop (automatic start). The motor can always be manually started by START push button.

If the interlocked equipments are not in the same pump room or are in the same pump room but wiring is not mechanically protected, the terminal **3-110 can not be used**; the terminal 104-106 must be used to connect a remote control voltage from the other equipment. Very important, verify that control voltage from other equipment and control relay CR10 are compatible. When voltage will be present between terminals (104-106), the controller is locked out and will not start with a pressure drop (automatic start). The motor can always be manually started by START push button.

LOW ZONE (OPTION A9)

To respect the NFPA 20-2007 art 10.5.2.6, the interconnected controllers must be installed in the same pump room and wiring between them must be mechanically protected. If not the OPTION A9A must be used.

Red terminals 31-16 must be connected to the NO contact from the upper level equipment. Closing this contact will initiate a start command.

Red terminals 15-15A must be connected to the upper level equipment to allow upper equipment starting.

MEDIUM ZONE (OPTION A10)

To respect the NFPA 20-2007 art 10.5.2.6, the interconnected controllers must be installed in the same pump room and wiring between them must be mechanically protected. If not the OPTION A10A must be used.

Red terminals 31L-16L must be connected to the NO contact from the upper level equipment. Closing this contact will initiate a start command of high controller.

Red terminals 15L-15AL must be connected to the upper level equipment to allow upper equipment starting.

Blue terminals 31H-16H is the starting command to the lower equipment. Command closure will initiate a lower equipment start.

Blue terminals 15AH-151H must be connected to the NO contact signaling the lower equipment running. Closure of this contact will enable the medium zone controller to start.

HIGH ZONE (OPTION A11)

To respect the NFPA 20-2007 art 10.5.2.6, the interconnected controllers must be installed in the same pump room and wiring between them must be mechanically protected. If not the OPTION A11A must be used.

Blue terminals 31-16 is the starting command to the lower equipment. Command closure will initiate a lower equipment start.

Blue terminals 15A-151 must be connected to the NO contact signaling the lower equipment running. Closure of this contact will enable the high zone controller to start.

LOW SUCTION PRESSURE SWITCH (OPTION B7)

Refer to label inside controller for connection details.

LOW DISCHARGE PRESSURE SWITCH (OPTION B9)

Refer to label inside controller for connection details.

LOW AMBIANT TEMPERATURE THERMOSTAT (OPTION B10)

Refer to label inside controller for connection details.

LOW WATER LEVEL FLOAT (OPTION B18)

Refer to label inside controller for connection details.

MOTOR HIGH TEMPERATURE (OPTION B19)

Two terminals 89-90 are installed on the terminal strip and must be connected to the motor temperature sensor. The wiring between terminals and sensor must be shielded.

HIGH VIBRATION SENSOR (OPTION B20)

Refer to label inside controller for connection details.

FLOW METER (OPTION B23)

Refer to label inside controller for connection details.

HIGH WATER LEVEL FLOAT (OPTION B24)

Refer to label inside controller for connection details.

10. PRESSURE BOARD PROGRAMMING



10.1. GENERALS

The EPSR (pressure board) can be programmed by entering in different menus.

In each mode, the pushbuttons have same functionality:

- Cut-in push button moves the cursor to its next position.
- Cut-out push button increases the selected value, or activate the selected function (Save, Next, Purge,...)

Some menus are reserved for technician. To have access to those specific menus, the dipswitch S8-2 (expert) must be activated. The standard menus are in the following sequence:

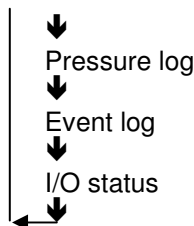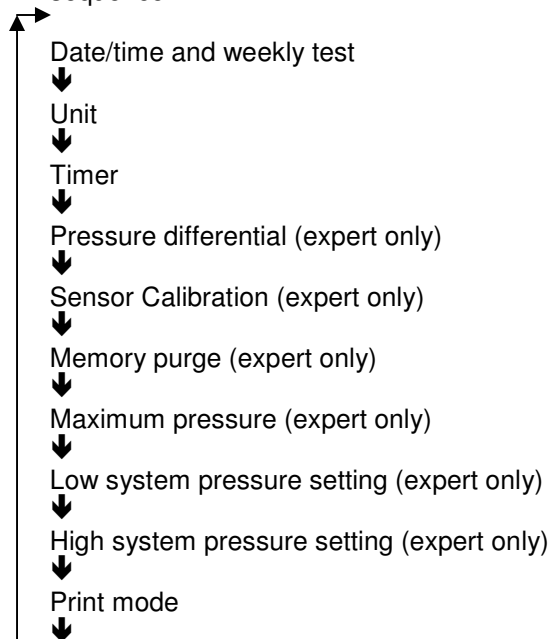

To have access to the first menu, the Cut-in pushbutton must be depressed more than 5 seconds.

To access the subsequent menus, press and hold the cut-in button for more than 5 seconds. When the time menu appears (5 sec.), maintain the cut-in button and press the cut-out button to scroll to the next menu. When the menu desired appears, release both push-buttons.

If no key is hit for more than 30 seconds, the EPSR returns to normal screen and the changes are not saved.²

When the EPSR is in normal mode, the following screen is:

We	23:23:32	E
245	252	262 P

The last digit on the first line is E or D. When letter E appears: a weekly test is programmed and pump will start at specific time. When letter D appears: the weekly test is disabled.

² Except sensor calibration

If the on timer (sequential start timer) or if the off timer (run period timer) is counting, the remaining time is displayed on the top right. (22 seconds remaining in the next figure)

```
We 23:23:32 22
246 252 262 P
```

If the word 'MANU' appears on the right, the system is waiting for a manual stop.

```
We 23:23:32 MANU
245 252 262 P
```

10.2. DATE/TIME AND WEEKLY TEST MENU

In this menu, the user can modify the time and the date, as well as programming the weekly test.

```
22:36 02-Ja-2006
WT:ON NEXT
```

On the first line, the user can adjust the time and the date

On the second line, the user can enable the weekly test (WT:ON), or disable the weekly test (WT:OFF).

If weekly test is enabled, the NEXT function will open a second window.

```
STOP START Mo
05:35 05:30 SAVE
```

On the first line, the user can program the weekday of the test.

On the second line, the user can program the stop time and the start time of the test.

10.3. UNITS

In this menu, the user can modify the unit of the displayed pressure.

```
Unit : PSI
SAVE
```

The pressure can be displayed in PSI (pound per square inch) or bar.

10.4. TIMERS

In this menu, the user can program the EPSR timers.

```
Off Tim:600 AUTO
On Time:10 SAVE
```

In this example, the off timer is programmed as auto stop after 600 second and the on timer is programmed for 10 seconds.

10.4.1. OFF TIMER – RUN PERIOD TIMER

The first line is dedicated for off timer.

With this timer, the user can program the EPSR for a manual shutdown (MANU) or automatic shutdown (AUTO) after a certain time.

The delay is programmed in seconds (0 to 999).

If the timer is programmed for manual shutdown (MANU), the shutdown occurs only by activating the stop push button. The timer value has no impact in this mode.

If the timer is programmed for automatic shutdown (AUTO), the shutdown occurs automatically after the timer has expired.

Note: the timer starts counting when pressure is above cut-out threshold, and is automatically reset at its initial value if pressure drops below cut-out threshold.

Note: when off timer is programmed, the remaining time before shutdown is displayed on the top right of the normal screen.

10.4.2. ON TIMER-SEQUENTIAL START TIMER

With this timer, the user can program a delay before starting the pump. The delay is expressed in seconds (0 to 99). The pump starts at the expiration of this timer. The ON timer starts counting when pressure drops below cut in threshold. The ON timer resets to its initial value when pressure reaches cut-out threshold.

Note: when on timer is programmed, the remaining time before start is displayed on the top right of the normal screen.

10.5. PRESSURE DATA'S INTERVAL

This menu is accessible for expert only (dipswitch S1-2 on).

In this expert menu, the expert user can define the interval between two pressure data's. (1-2-5-10 psi or 0.07-0.14-0.35-0.69 bar).

Press Difference
5PSI SAVE

The pressure value is scanned every ± 0.1 seconds. If the difference between the actual pressure value and the last memorized pressure value is greater than the interval, the actual value is memorized. This value becomes the last memorized value for the next scan.

Note: the pressure is also memorized at the top of the hour.

10.6. CALIBRATION OF THE PRESSURE SENSOR

This menu is accessible for expert only (dipswitch S1-2 on).

In this expert menu, the expert user can calibrate the pressure sensor on the site.

LO: 0023*ReadEXIT
HI: 0500 ReadNEXT

If the EPSR is supplied with a pressure sensor, the EPSR has been calibrated at factory.

Important: this expert menu does not disappear automatically. The user must hit the EXIT or the SAVE box to return to normal screen.

The following procedure must be followed to perform the calibration.

IMPORTANT: a high accurate reference gauge must be connected to the system where it is representative to the pressure applied to the sensor.

1. A low pressure must be applied to the system; the readout of the

reference gauge must be entered in the menu after 'Lo' and the cursor must be moved to Read. The 'Cut Out' push button must be depressed to record this value. A "*" appears in front of Read.

2. A high pressure must be applied to the system; the readout of the reference gauge must be entered in the menu after 'Hi' and the cursor must be moved to READ. The 'Cut Out' push button must be depressed to record this value. A "*" appears in front of Read.
3. The cursor must be moved to 'NEXT' and the 'Cut Out' push button must be depressed.
4. A second window appears that give the result of the calibration (OFFSET and GAIN value).

Offset: 437 EXIT
Gain: 15425 SAVE

5. The cursor can directly be moved to SAVE.

When saving is executed, a message 'new calibration successful' appears for two seconds.

If the Exit is selected, a message 'Exit without changes' appears for two seconds.

In each screen, there is a possibility to exit this menu without modifying values.

Note: the largest is the difference between the low and high pressures, better is the calibration.

If the calibration does not give satisfaction, the procedure can be repeated.

10.7. MEMORY PURGE

This menu is accessible for expert only (dipswitch S1-2 on).

Memory Purge
EXIT PURGE

In this menu, the expert user can erase the pressure data's memory.

A message 'Memory Purging - Reset when compl' appears on the display. This

message disappears when purge is completed.

VERY IMPORTANT: The controller must be shut down when purge is completed.

10.8. MAXIMUM PRESSURE

This menu is accessible for expert only (dipswitch S1-2 on).

```
Maximum Pressure
300 PSI      SAVE
```

In this menu, the expert user can change the maximum pressure of the cut-out threshold. If the system pressure reaches 125% of maximum pressure, the EPSR ready relay will be reset and the message « Pressure failure - Print to reset » will appear on the screen and an event will be memorized.

10.9. LOW SYSTEM PRESSURE

This menu is accessible for expert only (dipswitch S1-2 on).

```
Low System Press
000 PSI      SAVE
```

In this menu, the expert user can change the low system pressure threshold. If the system pressure drops below this value, a message will appear on the screen and an event will be memorized.

10.10. HIGH SYSTEM PRESSURE

This menu is accessible for expert only (dipswitch S1-2 on).

```
High System Pres
300 PSI      SAVE
```

In this menu, the expert user can change the high system pressure threshold. If the system pressure reaches this value, a message will appear on the screen and an event will be memorized.

10.11. PRINT MODE

In this menu the user can select how the pressure data's will be print (if a printer is installed)

```
Print Mode:TEXT
SAVE
```

The print mode can be set as TEXT or as GRAPH.

If set as text, each pressure record is printed on a separate line as follows:

```
Pressure unit is PSI
83  Mar 23, 12:54
93  Mar 23, 12:24
104 Mar 23, 12:12
```

The first group is the pressure value expressed in the selected unit. The second group is the date and time of the record.

If set as graph, the pressure record is printed as a bargraph.

```
Print Mode:GRAPH
NEXT
```

When graph is selected, a second window can be open to select the axis value.

The Y axis is the pressure axis.

```
Y max :300
Y min :200 NEXT
```

The X axis is the time axis. The selection is 1h or 1/4h.

```
X : 15 min
Grid :2      SAVE
```

The grid can be set between 0 and 4. If set, grid line will be drawn to help reading the pressure.

Note: the graph is practical only if pressure is very stable.

10.12. PRESSURE LOG

In this menu, the user can view pressure log on the screen.

Pressure Log

First line shows date/month and time,
second line shows pressure value.

03-mar 12:36:18
125

An action on the cut-in push button moves to the next log.

An action on the cut-out push button moves to the previous log.

IMPORTANT : to exit this menu, either no pushbutton must be depressed for more than 30 seconds, or the cut-in push button must be pressed for more than 10 seconds.

10.13. EVENT LOG

In this menu, the user can view event log on the screen.

Event Log

First line shows date/month and time,
second line shows event.

03-mar 12:27:03
Pump start

An action on the cut-in push button moves to the next log.

An action on the cut-out push button moves to the previous log.

IMPORTANT : to exit this menu, either no pushbutton must be depressed for more than 30 seconds, or the cut-in push button must be pressed for more than 10 seconds.

10.14. I/O STATUS

In this menu, the user can view the status of input and output, as well as analog inputs

In:1.345 Out:6.8
A:2A5Ah B:36B4h

First line shows which inputs and output are activated. The input or output is activated if the number is shown.

Input :

1 :pump room alarm

2 :motor trouble

3 :motor run

4 :stop push button

5 :dip switch (cw/wo solenoid)

Output

6 :weekly test

7 :EPSR ready

8 :pump demand

The second line shows the hexadecimal value of the analog input 1 (0..5V) and input 2 (0..100mV).

11. USB PORT

11.1. GENERALS

The controller can be connected to a USB port.

The EPSR driver can be easily downloaded from the TornaTech web site.

11.2. VERIFICATION OF USB PORT

It is important to correctly set the computer to retrieve data's from the controller.

On the 'control panel', click « System ». Select « Hardware », click « Device manager »:

Verify that there are two communication ports for 'EPSR USB Serial port'. If not the installation of the driver has not been set correctly and must be redone.

Remind which communication port is used for the EPSR USB Serial port.

11.3. RETRIEVING DATA'S

All information is retrieved via HyperTerminal software that is provided with all Windows ® version.

11.3.1. CONNECTION TO EPSR

Laptop communication

Connect your laptop computer communication port to the EPSR USB port.

11.3.2. COMMUNICATING

To communicate with the EPSR, communication software is required. The latest versions of Windows ™ come standard with Hyper Terminal software.

- a. Select from the Windows™ Toolbar: Start – all Program – Accessories - (Communication) – HyperTerminal or Start - all program - EPSR - EPSR comm. ht
- b. If Hyper Terminal software has not been previously configured, double click on hypertrm.exe. *Note: This procedure might not be available on certain versions of software*
- c. If your Hyper Terminal software has already been configured to communicate with an EPSR, select this configuration.

- d. To access a previously configured communication, click “file – open” and select the file.


11.3.3. COMMUNICATION CONFIGURATION


To be able to communicate with the EPSR, the communication parameters between the Fire Pump Controller and laptop computer must be identical.

In the « New Connection » window, enter a connection name. Ex: "EPSR"

Click on « OK » to validate

The «Connect to» window will open and in the connect using box, the USB com port must be entered. (See “verification of USB port)

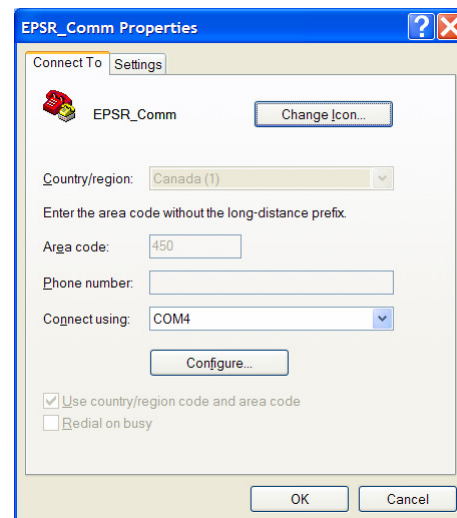


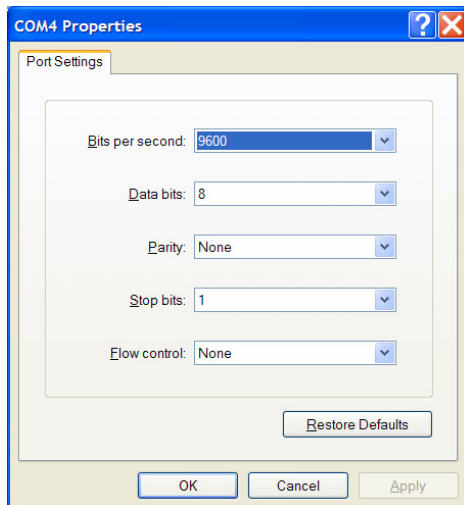

Click 'configure' and verify the following Port settings: bits per second: 9600 - data bits: 8 - parity: none - stop bits: 1 - flow control: none

Click « OK » to validate

On the Settings windows, verify the following

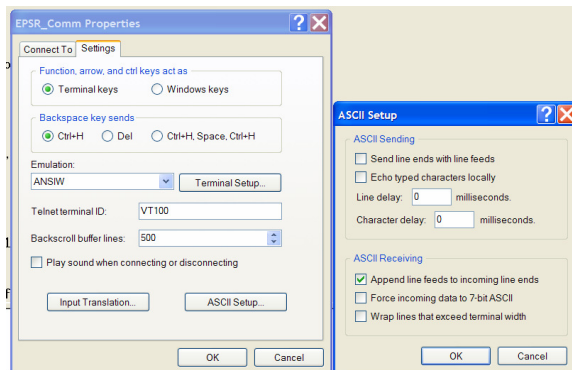

selection 'Terminal Keys' - 'Ctrl+H' - 'ANSW' - 'VT100' - '500'.


Click 'ASCII Setup and verify only 'Append line feeds to incoming line ends' is checked.

Press "OK" to validate.

11.3.4. DOWNLOADING DATA'S

Important, in this step, the data's will appear on the screen. If those information's need to be saved, the Capture text must be active.

Verify the computer is correctly connected:

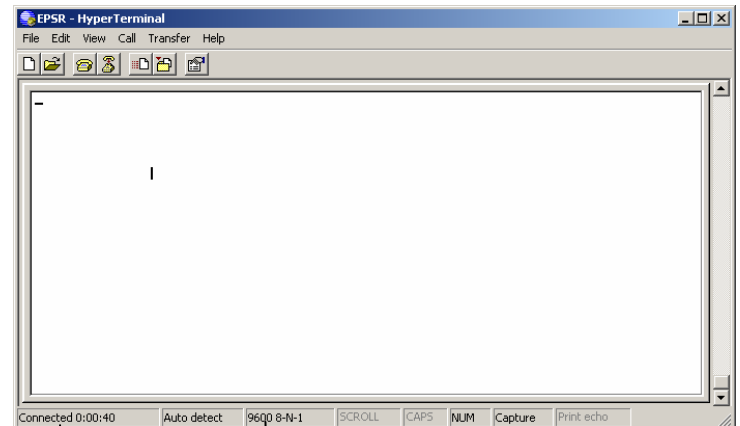

Connected and timer is counting. If "disconnected", select "Call - call"

9600-8-N-1
If different, restart a new communication and adjust "COM" properties. (Port settings)

If highlighted, the data's will be stored in the selected file. Note: if the .txt file is not empty, the new data's will be stored at the end of the text.

If not highlighted, it will not be possible to save downloaded data's

To enable Capture, click "transfer-capture text - enter file name - start".

To capture text (save information as .txt file), the word Capture on the bottom must be highlighted.

To highlight Capture: select Transfer - Capture Text -

A window will open to select the destination file. With the help of the Browse function, enter the name of the destination file. The file name must be ended by '.txt'.

It is good practice to save the data with a name incorporating the date. Ex: my documents\20061024.txt (for October 24, 2006)

click « Start » to begin capturing. At that moment, all new incoming text will be saved in the destination.

Click "transfer-capture text-stop" to stop saving incoming text.

On the computer keyboard,
hit the "1" key to get pressure value of both
analog inputs, or
hit the "2" key to download pressure data's
of last 7 days , or
hit the "3" key to download resume of last 15
days events, or
hit the "4" key to get EPSR settings.

11.3.5. CLOSING HYPER TERMINAL SESSION

Once the data has been downloaded, the
communication can be disconnected.
Click on File, select Exit
Click on « YES » to disconnect

11.3.6. READING AND PRINTING OF THE DATA

The downloaded data's are saved in the
destination file. This file is as .TXT type that
can be red by "Notepad", "Word", "Lotus"
and "Excel" and other software's.
Upon opening this file, for it to show in the
file list, the ".TXT" file type needs to be
selected.
The data can be saved and printed using
Word, Excel, and Notepad.....

12. PRINTER

If the EPSR is connected to the TornaTech thermal printer, the pressure data's can be printed.

A first hit of the 'Print' key will activate the printer.

The printing starts by seven days resume of the pressure events.

<u>EPSR</u>	
LAST SEVEN-DAY RESUME	

Day : Tu, Mar 23, 04 Time : 14:25	Date and time of the printout
Cut in : 32 psi	Adjusted thresholds
Cut out : 49 psi	
Last Change : 23 Mar 2004, 12:53	Last time when thresholds have been adjusted
Pmin : 22 psi Tu, Mar 12, 13:52	Minimum and Maximum pressure during the last
Pmax : 250 psi Tu, mar 23, 14:01	seven days.
Weekly Test :	Weekly test status.
Enabled	
Weekly Test Start Time : Mo, 8:30	Settings are shown only if weekly test is enabled
Weekly Test Stop Time : Mo, 8:31	
Pump Demand : 2	Number of time the pump demand relay has been activated
Manu Off Mar 23, 23:18:44	Date and time when remote stop has been activated
On Mar 23, 23:07:12	Date and time when pump demand relay has been activated
Auto Off Mar 21, 12:06:06	Date and time when pump demand relay has been de-energized
On Mar 21, 11:30:24	Date and time when pump demand relay has been activated
Weekly test : 1	Number of time the weekly test relay has been activated
Manu Off Mar 17, 8:31:00	Indicates Manu is remote stop has been activated
On Mar 17, 8:30:00	
Power failure : 1	Number of time power failures occurs
Power On Mar, 22, 10:12:55	Date and time of power-up
Power Off Mar, 22, 10:00:55	Date and time of shutdown
System failure : 1	Number of time system failure occurs
Off Mar 17, 7:31:00	
On Mar 17, 6:35:00	
Settings	Actual settings of the EPSR
Press. Diff. 5 psi / 34 kPa	
On Timer : 5	= Sequential start timer
Off Timer : 12	= Run period timer
Offset : 421	
Gain : 12234	
Calibrated : jun 22 2006, 12:53	Last time when the calibration has been performed
Adjustment : locked	Dipswitch S8-1 status

Soft version :040122SWP01-01
End of resume
Press Print to print pressure data's

Software version of the EPSR


A second hit of the 'print' key within the 15 seconds of the end of the printing will activate the printer. The second printout is the pressure data's. Depending of the

printout settings, the printout is a successive list of pressure data's (Text mode) or a continuous curve (Graph mode)

Pressure unit is PSI
83 Mar 23, 12:54:52
93 Mar 23, 12:24:24
104 Mar 23, 12:12:36

Pressure can be shown is kPa or PSI depending of EPSR settings
Pressure value in PSI (or kPa), Month, day, time.

13. START-UP AND TEST PROCEDURES

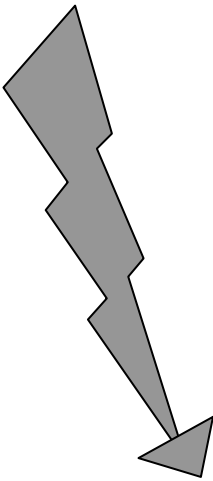	<div data-bbox="727 304 1230 357">DANGER</div> <p data-bbox="597 436 1279 541"><u>HAZARDOUS VOLTAGE IS PRESENT IN THE ENCLOSURE WHICH WILL CAUSE SEVERE PERSONAL INJURY OR DEATH.</u></p> <p data-bbox="597 583 1360 688">MAINTENANCE OR START UP SHOULD BE PERFORMED ONLY BY EXPERIENCED LICENSED ELECTRICIANS.</p> <p data-bbox="597 730 1328 793">ONLY QUALIFIED PERSONNEL SHOULD WORK ON OR AROUND THIS EQUIPMENT.</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

13.1. VERIFICATIONS

13.1.1. ELECTRICAL INSTALLATION

A representative for the electrical contractor responsible for the installation shall be available on-site to assist during the verification of the following points and the actual start-up.

All electrical label ratings meet incoming power voltage and frequency as well as motor voltage, HP and frequency.

All electrical connections in controller are tight. Retighten if necessary.

All electrical connections are properly completed and power is available.

13.1.2. PIPING INSTALLATION

A representative for the sprinkler contractor responsible for the installation shall be available on-site to assist during the verification of the following points and the actual start-up.


All water connections are properly completed; water is available and free of dirt and/or contamination.

NOTE: Standard controllers have pressure sensor rated for fresh water only. If other conditions exist, make sure that the controller pressure sensor is compatible.





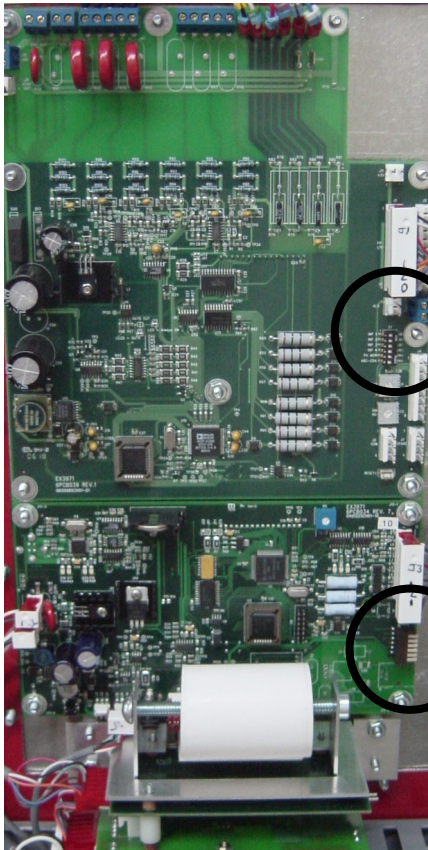

13.2. SETTINGS

13.2.1. DIPSWITCH - FIRE PUMP SECTION







Two dipswitches must be correctly set.



Upper board: the dipswitch is factory set and the only switch that must be adjusted if necessary is the ABC-CBA switch.

Inp 1		Do not change
Inp 2		Do not change
Inp 3		Do not change
Inp 4		Do not change
Ph mon		Do not change
ABC - CBA		Phase reversal reference

Lower board: the 'lock-unlock' and 'Norm-Exp' switches will be used during set up. Other switches are factory adjusted and must remain in their position.

Lock-Unlock		Cut-in & cut out adjustment
Norm-Exp		Selection of menu
mV - 0..5V		Selection of pressure input
cw/wo valve		Do not change (set at factory)
Spare		Do not change
Spare		Do not change

13.2.2. PRESSURE ADJUSTMENT

If the system pressure drops below the cut-in pressure value, the controller initiates a pump starting sequence. When the system pressure reaches the cut-out value, the pump will stop when the stop push button is activated or will be stopped automatically if adjusted for an automatic stop .

It is important to adjust the cut out value first. This adjustment must be set below the maximum pressure of the pump otherwise the engine will never stop.

The cut in value must be adjusted at the system pressure.

Before adjusting the pressure set points, the adjustment dip switch (Lock-Unlock) must be set to UNLOCK to enable the function.

A quick push on the push button will increase value by one (1) unit. A long push will increase value by ten (10) units. The value only increases from minimum to maximum, and when the maximum is reached, the value return to the minimum value.

It is important to re-set the dip switch to "LOCK" position to prevent unauthorized changes

It is possible to avoid nuisance starting by depressing the stop push button while dipswitch is in UNLOCK position.

13.3. FIRE PUMP SECTION - VERIFICATION

13.3.1. MOTOR ROTATION VERIFICATION

- ◆ Turn isolating switch handle to the ON position.
 - If the system pressure is above the cut out pressure setting (pressurized system), the motor will not start right away.
 - If motor does not start, press the START pushbutton.
 - ◆ Press stop push button to stop the motor.
 - ◆ Check the motor rotation.
 - If the motor rotation is correct, no further adjustment is required, move to the next section.
 - ◆ Correct the motor rotation.
 - Motor rotation can be changed by reversing any two motor wires either at the motor junction box or on the motor connection terminals inside the controller. **In both cases, the operator shall assure that the power is disconnected before proceeding.**
- NOTE: Under no circumstances shall the internal wiring of the controller be tampered with. Failure to comply will void warranty, may cause injuries and damage the controller. Only the wires directly feeding the motor can be reversed.
- ◆ Turn isolating switch handle to the ON position.
 - ◆ Check the motor rotation once more.

13.3.2. PHASE REVERSAL INDICATION VERIFICATION

- ◆ Turn isolating switch handle to the ON position.
 - If the red LED 'phase reversal' is off, feeders are in the right phase sequence. No further adjustment is required, move to the next section.
 - If the red LED 'phase reversal' is on, feeders and electronic module do not have the same sequence and the electronic board needs to be adjusted.
 - Turn isolating switch handle to the OFF position.
 - Open control panel door.
 - Locate the dipswitch « ABC-CBA » on the upper board.
 - With a small screwdriver or pencil, change « ABC-CBA » dipswitch from left to right.
 - Close controller panel door.
 - Turn isolating switch to the ON position.
 - Verify that red LED 'phase reversal' is off.

13.4. FIRE PUMP CONTROLLER - INITIAL START UP AND FUNCTIONALITY TEST

13.4.1. INITIAL START UP

- ◆ Turn the isolating switch handle to the ON position.
 - If the system pressure is above the cut in pressure setting (pressurized system), the motor will not start.
 - If the system pressure is under cut in pressure setting (under-pressurized system), the motor starts automatically to build up pressure.
- ◆ When the pressure is restored, the motor can be stopped using the STOP push button. The controller is ready for further tests.

13.4.2. START FROM START PUSHBUTTON	
<ul style="list-style-type: none"> ◆ Press the START pushbutton on the controller, pump motor will start regardless of the system pressure and continues to run. (No possibility of automatic stop.) ◆ Measure and record the current drawn by the motor on phase 1, 2 and 3 under no load condition and full load condition. ◆ Press STOP pushbutton on the controller, pump motor will stop. 	
13.4.3. START FROM EMERGENCY START HANDLE !!!! CAREFUL !!!!	
<ul style="list-style-type: none"> ◆ Lift the EMERGENCY START handle. Because of an electrical assistance, the pump motor must start before a 'resistance point'. The motor will always start in full voltage and continues to run (no possibility of automatic stop even when the handle is released to its OFF position). ◆ Pull down EMERGENCY START handle back to lower position ◆ Press STOP pushbutton on the controller, pump motor will stop. 	
13.4.4. START FROM REMOTE START STATION	
<ul style="list-style-type: none"> ◆ If a remote start circuit is connected to the controller <ul style="list-style-type: none"> • Press the remote START pushbutton or initiate opening of the remote start contact, the pump motor will start regardless of the system pressure and continues to run. (No possibility of automatic stop.) • Press STOP pushbutton on the controller, pump motor will stop. 	
13.4.5. START FROM FIRE EQUIPMENT CONTROL (DELUGE VALVE) (OPTION A3)	
<ul style="list-style-type: none"> ◆ Initiate opening of the contact, the pump motor will start regardless of the system pressure and continues to run. (No possibility of manual stop if contact remains opened unless the circuit breaker is turned off.) ◆ Initiate closure of the contact. ◆ Press the STOP pushbutton, the pump motor will stop. 	

13.4.6. WATER PRESSURE CONTROL

MANUAL SHUTDOWN MODE

- ◆ Verify that the EPSR board is programmed for manual stop.
- ◆ Simulate a pressure drop in the system by draining water off the pressure sensing line.
- ◆ The pressure sensor automatically starts the pump motor when the pressure falls below the cut-in setting.
- ◆ Verify that the pump motor starts at the desired pressure. If not, readjust the cut-in start pressure.
 - Open the control door,
 - Set dipswitch 'Lock-Unlock' to 'Unlock' position
 - Adjust the settings using cut-in and cut-out push button.
 - After modification, reset dipswitch in 'Lock' position.
- ◆ When the pump has started and the pressure is below the cut-out threshold, the wording 'PUMP ON DEMAND' is shown on the screen. STOP pushbutton is disabled until pressure is restored.
- ◆ When the pressure is over the cut-out threshold, the wording 'PUMP ON DEMAND' disappears and word 'MANU' is shown on the first line; press the STOP pushbutton to stop the pump.

AUTOMATIC SHUTDOWN MODE

NFPA20-2007 §10-5.4 (b) : '....automatic shutdown shall not be permitted where the pump constitutes the sole supply of a fire sprinkler or standpipe system or where the authority having jurisdiction has required manual shutdown '

- ◆ Verify that the EPSR board is set for automatic shutdown
- ◆ Simulate a pressure drop in the system by draining water off the pressure sensing line. The pressure sensor automatically starts the pump motor when the pressure falls below the cut-in setting.
- ◆ Verify that the pump motor starts at the desired pressure. If not, refer to above for readjustment
- ◆ Let the pump build up pressure.
- ◆ 10 minutes (factory set at 10 minutes) after the pressure has reached the cut out setting, the pump motor will automatically stop. Note: remaining time before shutdown appears on the 1st line.

Note: the 10 minute run period timer is reset if the system pressure drops below cut in value. It is recommended to adjust cut out value 20 psi below maximum pump pressure.

The pump motor can be stopped before the expiration of the run period delay by pressing the STOP push button if the pressure is higher than the cut out setting

13.4.7. FLOW SWITCH PUMP START (OPTION A4)

The flow switch automatically starts the pump motor as soon as the flow exceeds the setting on the flow switch. Usually this condition will be detected faster than a pressure drop.

- ◆ Verify that the motor starts when a water flow is detected (closing signal from flow switch)
(NOTE: No possibility of automatic or manual stop if the flow switch contact remains closed unless the circuit breaker is turned off.)
 - If the motor has started because of flow switch and the controller did not detect a pressure drop, the motor will stop when flow switch contact will open.
 - If the motor has started because of flow switch and the controller did detect a pressure drop,
 - If the controller is set for automatic stop, the pump motor stops when water flow has

<p>subsided and after the run period time has expired.</p> <ul style="list-style-type: none"> • In the automatic mode, pressing the STOP pushbutton can stop the pump motor if the water flow has subsided before the run period time has expired. • If the controller is set for manual shut down only, press the STOP pushbutton, the pump motor will stop if water flow has subsided.
<p>13.4.8. <u>WEEKLY AUTOMATIC EXERCISE CYCLE</u></p>
<p><u>IMPORTANT:</u> It is the responsibility of the operator to be sure that the system accepts unsupervised test. Certain pumping systems need water flow in the system otherwise the pump can be damaged by overheating.</p> <p><u>Automatic exercise cycle</u></p> <ul style="list-style-type: none"> – Program weekly test. – Verify letter 'E' appears on the screen. – At the beginning of the new test cycle, the pump motor will start and the light 'Weekly test' goes on – At the end of the test cycle, the pump motor will stop automatically; light 'weekly test' shuts down. – Reprogram the time clock to the desired exercising schedule. <p><u>Manual exercise cycle.</u></p> <ul style="list-style-type: none"> – Press simultaneously both pressure adjustment push buttons. The pump starts for a 10 minute period. The light 'Weekly test' goes on – At the expiration of the timer, the pump motor will stop automatically; light 'weekly test' shuts down. <ul style="list-style-type: none"> • Note : Manuel stop with stop push button is possible before the end of the test cycle. • Note : Exercise cycle is cancelled if pressure drops below cut-in threshold • Note: remaining time before stop is shown on the screen (in seconds)

13.5. ALARM TEST

<p>13.5.1. <u>PHASE LOSS</u></p>
<ul style="list-style-type: none"> ♦ Simulate a power failure by switching the isolating switch handle to OFF position. <ul style="list-style-type: none"> • Verify the circuit connected to the terminals 'Pow Av' is reacting properly.
<p>13.5.2. <u>PUMP RUN</u></p>
<ul style="list-style-type: none"> ♦ Start the pump by pressing the START pushbutton. <ul style="list-style-type: none"> • Verify the circuit connected to the terminals 'RUN NC' and/or 'RUN NO' is reacting properly.
<p>13.5.3. <u>PHASE REVERSAL</u></p>
<ul style="list-style-type: none"> ♦ Simulate a phase reversal by maintaining the RESET pushbutton for more than 10 seconds in order to start phase reversal simulation. <ul style="list-style-type: none"> • Verify the circuit connected to the terminals "Ph. Rev." is reacting properly.

13.5.4. WEEKLY TEST (OPTION C4)
<ul style="list-style-type: none"> ◆ Start the pump by programming the weekly test <ul style="list-style-type: none"> • Verify the circuit connected to the terminals 'Weekly T.' is reacting properly.
13.5.5. LOW SUCTION (OPTION C5)
<ul style="list-style-type: none"> ◆ Simulate a drop of pressure on the suction pipe by draining water on the pressure sensing line. <ul style="list-style-type: none"> • Verify if the circuit connected to the AR10 relay base is reacting properly.

14. FIRE PUMP TROUBLESHOOTING HINTS

The following troubleshooting hints are intended to solve common field problems by qualified and authorized personnel only. This list is not exhaustive. If the problem is not solved with the following hints, please do not hesitate to contact factory.

IMPORTANT: Re-tighten all connections (terminals – relays sockets screws – etc.) before doing any troubleshooting.

15. PREVENTIVE MAINTENANCE AND TEST

Fire pump controllers are an important part of your fire protection system. They require a minimum preventive maintenance but must be periodically inspected and their operation simulated to assure constant performance.

NOTE: Only qualified and authorized personnel must do this maintenance.

15.1. <u>VISUAL INSPECTION</u>	OK	N/D
Inspect cleanliness of controller.		
Remove any object from the top of controller.		
Dust and clean the controller.		
Inspect controller for any evidence of corrosion outside.		
Inspect controller for any evidence of corrosion inside.		
Check for leaks in pressure sensor and piping.		
Inspect door for proper alignment and function of door locks between compartments		
Inspect isolating switch handle for proper operation		
Inspect emergency start handle operation		
Verify operation of limit switch on emergency start handle		
Inspect tightness of all connections		
Inspect tightness of all terminal jumpers		
Inspect controller grounding		
Inspect harness mechanical attachment		
Inspect relays, contactors, and timers for any evidence of damage.		
Inspect tightness of all mounting nuts and screws.		
15.2. <u>OPERATIONAL INSPECTION</u>	OK	N/D
Simulate a phase reversal and check indication and remote alarm.		
Check motor rotation.		
Start from start push button		
Start from emergency start handle.		
Start from remote start station. (If connected.)		
Start from weekly test		
Start from water pressure control.		
Start from flow switch. (Option n° A4.)		
Verify low suction alarm condition. (Option n° B7 and/or C5.)		

Table of content

1.	General description	3
2.	Types of electric fire pump controllers	3
3.	Methods of starting / stopping	4
3.1.	Methods of starting.....	4
3.1.1.	Automatic start.....	4
3.1.2.	Manual start.....	4
3.1.3.	Remote start.....	4
3.1.4.	Emergency start	4
3.1.5.	Sequential start.....	4
3.1.6.	External signal start.....	4
3.1.7.	Weekly start.....	4
3.1.8.	Test start	4
3.2.	Methods of stopping.....	4
3.2.1.	Manual stop.....	4
3.2.2.	Automatic stop.....	4
4.	Front panel	5
4.1.	Generals	5
4.2.	Pump controller - power monitoring board	5
4.2.1.	Display.....	5
4.2.2.	'Reset' push button.....	6
4.2.3.	Power available light.....	6
4.2.4.	Phase reversal light.....	6
4.3.	Pump controller - pressure monitoring board	6
4.3.1.	Display.....	6
4.3.2.	Pump demand light.....	7
4.3.3.	Weekly test light	7
4.3.4.	Cut-out and cut-in pushbuttons.....	7
4.3.5.	Print pushbutton.	7
4.3.6.	Usb communication port.....	7
5.	Alarm contacts.....	9
6.	Installation	10
7.	Location.....	10
8.	Mounting.....	10
8.1.	Wall mounting	10
8.2.	Floor mounting	10
9.	Connections	10
9.1.	Water connections	10
9.2.	Electrical connections	11
9.2.1.	Electrical wiring.....	11
9.2.2.	Enclosure drilling	11
9.2.3.	Incoming power connections	11
9.2.4.	Motor connections	11
9.2.5.	Alarm contact connection	11
9.2.6.	Connection to external device	13
10.	Pressure board programming.....	15
10.1.	Generals	15
10.2.	Date/time and weekly test menu	16
10.3.	Units.....	16
10.4.	Timers	16

10.4.1.	Off timer – run period timer.....	16
10.4.2.	On timer–sequential start timer.....	16
10.5.	Pressure data's interval.....	17
10.6.	Calibration of the pressure sensor	17
10.7.	Memory purge	17
10.8.	Maximum pressure.....	18
10.9.	Low system pressure	18
10.10.	High system pressure	18
10.11.	Print mode.....	18
10.12.	Pressure log.....	19
10.13.	Event log.....	19
10.14.	I/O status.....	19
11.	USB port.....	20
11.1.	Generals	20
11.2.	Verification of usb port	20
11.3.	Retrieving data's	20
11.3.1.	Connection to epsr	20
11.3.2.	Communicating.....	20
11.3.3.	Communication configuration	20
11.3.4.	Downloading data's	21
11.3.5.	Closing hyper terminal session.....	22
11.3.6.	Reading and printing of the data	22
12.	Printer.....	23
13.	Start-up and test procedures	25
13.1.	Verifications	25
13.1.1.	Electrical installation	25
13.1.2.	Piping installation.....	25
13.2.	Settings.....	26
13.2.1.	Dipswitch - fire pump section.....	26
13.2.2.	Pressure adjustment.....	27
13.3.	Fire pump section - verification	28
13.3.1.	Motor rotation verification	28
13.3.2.	Phase reversal indication verification	28
13.4.	Fire pump controller - initial start up and functionality test	28
13.4.1.	Initial start up.....	28
13.4.2.	Start from start pushbutton	29
13.4.3.	Start from emergency start handle	29
13.4.4.	Start from remote start station	29
13.4.5.	Start from fire equipment control (deluge valve) (option a3).....	29
13.4.6.	Water pressure control	30
13.4.7.	Flow switch pump start (option a4)	30
13.4.8.	Weekly automatic exercise cycle.....	31
13.5.	Alarm test.....	31
13.5.1.	Phase loss	31
13.5.2.	Pump run	31
13.5.3.	Phase reversal.....	31
13.5.4.	Weekly test (option c4)	32
13.5.5.	Low suction (option c5).....	32
14.	Fire pump troubleshooting hints	33
15.	Preventive maintenance and test	34
15.1.	Visual inspection	34
15.2.	Operational inspection	34

Software version:
060008SWP01-02 , -03 or -04
040122SWP01-08 , -09 , -10 or -11

TornaTech Inc
7075 Place Robert Joncas
Unit 132
Saint Laurent, Qc, H4M 2Z2
Canada

Tel: +1 514 334 0523
Fax: +1 514 334 5448
www.tornatech.com